


Bag Boy Swivel Conversion Kit Installation

①




① Get Swivel Conversion Kit ready.

②

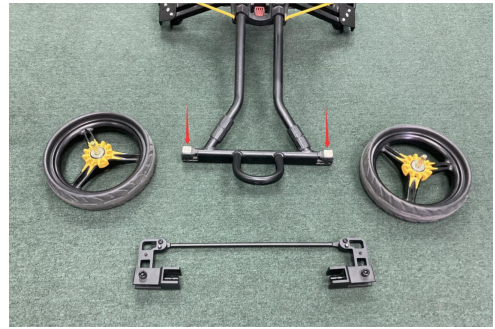

② Remove both front wheels by pressing the release buttons.

③

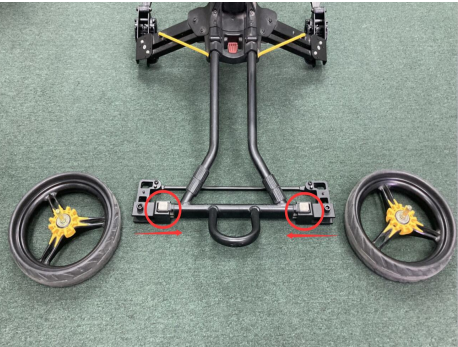


③ Insert axle studs on both sides of the Kit into the axle holder as shown.

④



④ Loosen the top screw a little. Do not need to unscrew all the way.

⑤

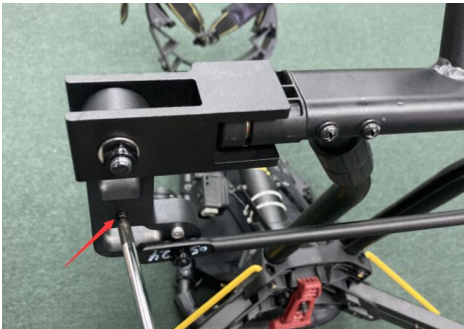

⑤ Loosen the bottom screw as well, to allow wheel axle to be inserted.

⑥



⑥ Insert Wheel axle into receiver hole and tighten both top and bottom screws.

⑦



⑦ Once wheels are both secured and you are ready to go enjoy.